

how to: fit a tap aerator



1: MEASURE your current flow rate with one of our easy to use flow bags



2: UNSCREW the end housing of the tap (you might need one of our special tools or a wrench if it's tight)



3: REMOVE the housing, discard the old filter if one was installed and clean away any limescale




4: CHECK the components of your new tap aerator; the housing, the regulator, and a washer



5: ASSEMBLE the regulator into the housing and loosely place the washer on top



6: SCREW back onto the tap (being careful not to over-tighten), turn the tap on and check for leaks

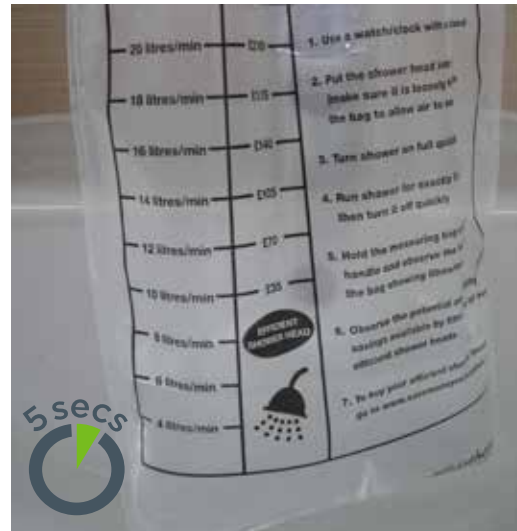

7: USE your flow bag again to measure the new flow rate and see how much you're saving

our range of quality products is innovative and proven to save you more

- Tap Aerators & Eco Taps
- Eco Shower Heads
- LED Lighting:
- Interior, Exterior & Tubes
- HVAC & Intelligent Room Controls
- Boiler Management

for help or further information speak to one of the team on

0845 123 5464

e: team@savemoneycutcarbon.com
w: www.savemoneycutcarbon.com