




DRAUGHT BUSTER™

Instructions

1. Simply slide Draught Buster™ underneath the door, ensuring the curved side is facing inwards. (see diagram).

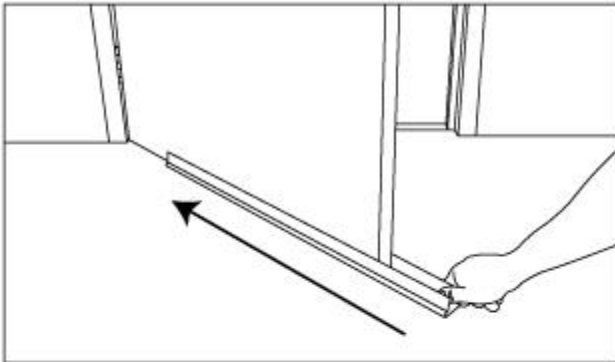

2. If the door measures less than the standard door width size of 76cm (30") then use a suitable sharp tool (small toothed hacksaw or a craft knife) to cut to size.